


# Tow vehicle wiring for vans with **Drum Brakes with Redarc 30/50 without ESC**

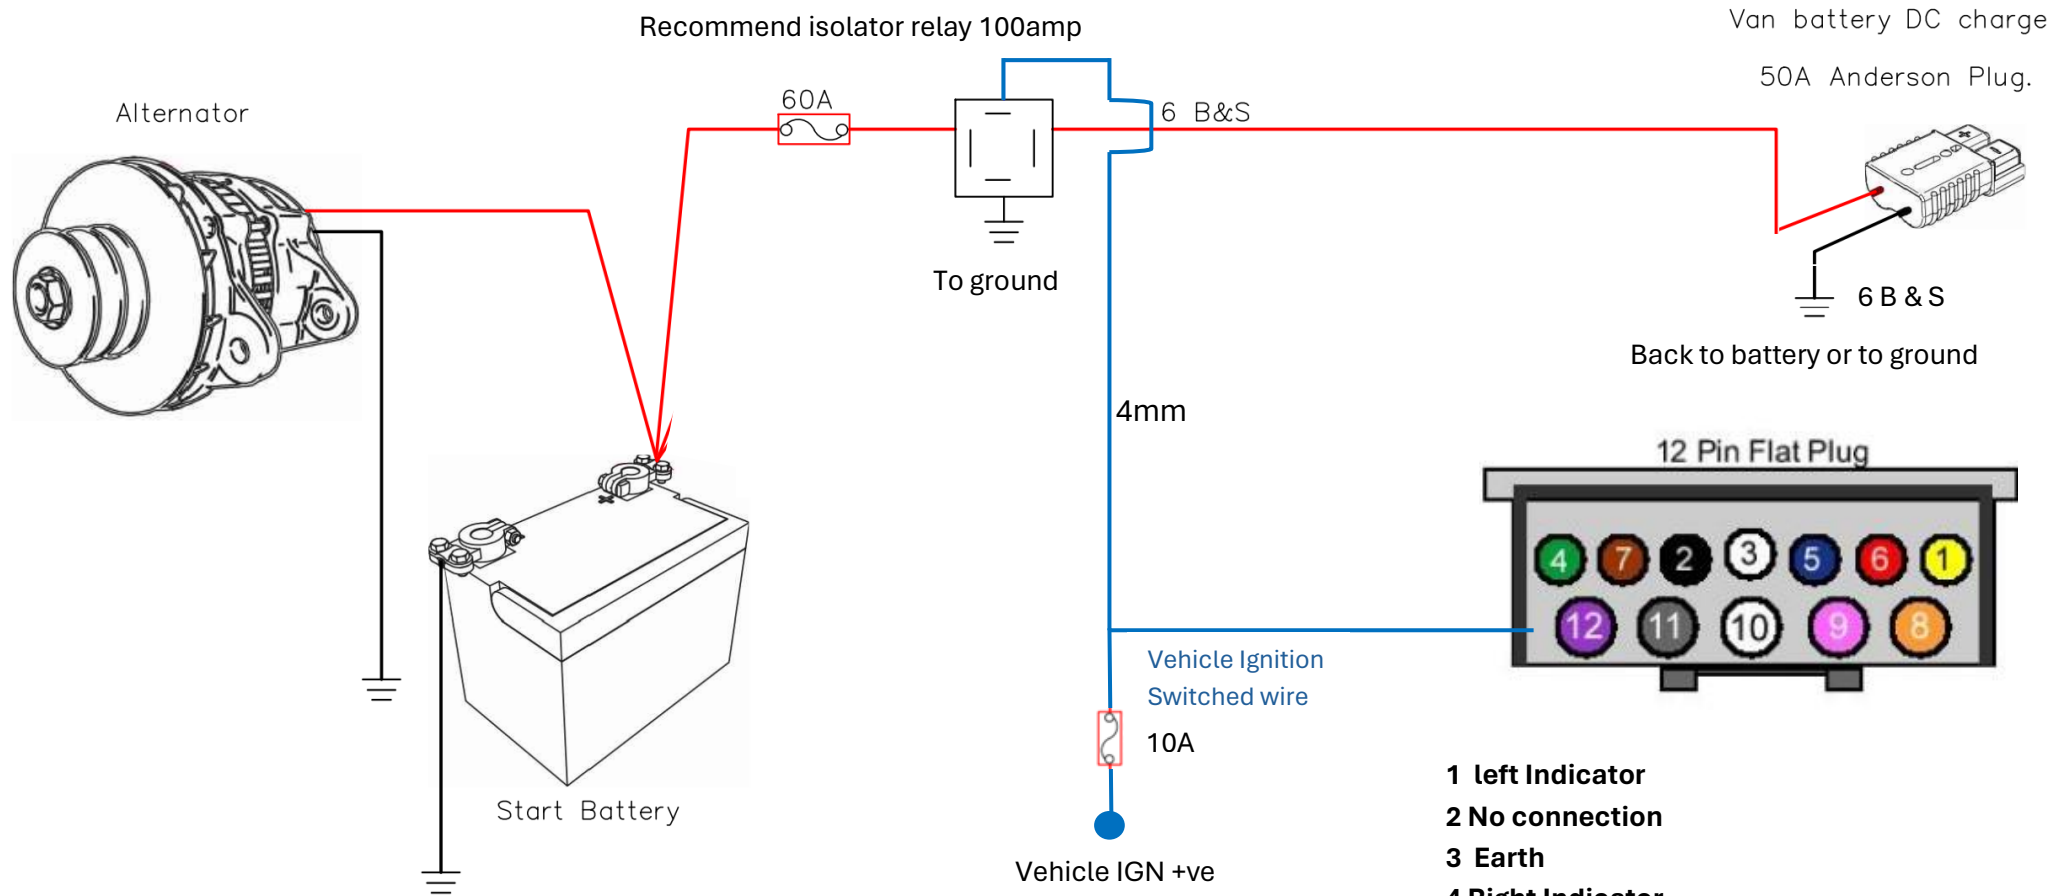

- **For proper operation, the tow vehicle must provide a switched 12-volt positive feed to pin 12 via its ignition for the van's battery charging system and airbags (if equipped).**
- **AOR recommends having all vehicle wiring carried out by a qualified auto electrician.**

- 1 left Indicator
- 2 No connection
- 3 Earth
- 4 Right Indicator
- 5 Electric brake controller
- 6 Stop lights
- 7 Clearance lights
- 8 No connection
- 9 no connection
- 10 No connection
- 11 No connection
- 12 12 volt positive switched via Ignition